


General

The seat heater of front seats can be switched on only in steering lock position 1 and 2, the rear seats only in steering lock position 2 by means of a pushbutton switch. With the seat heater switched on, an indicator lamp in pushbutton will light up. To protect the battery, do not switch on position ●● longer than absolutely necessary when the engine is stopped. (In steering lock position 1 with switching according to 1st version only).

Pushbutton position center — seat heater switched off.

Pushbutton position ● — continuous operation.

Pushbutton position ●● — fast heating up.

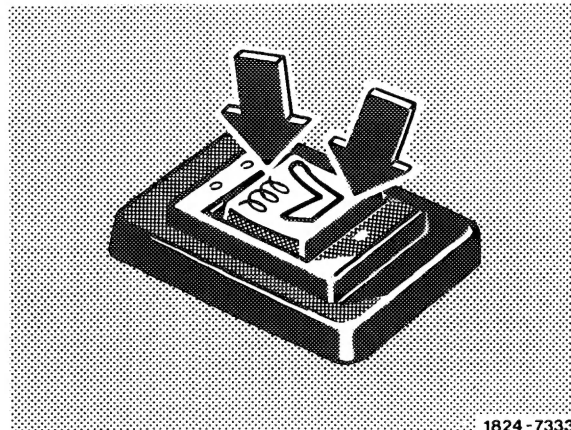

1824-7333


Electric function

In pushbutton position ● the two heating pads in seat are switched in line. The power input amounts to approx. 1.3 amps at 12 V battery voltage. The result is an electric output of approx. 15 W.

Wiring diagram 1st version

- 1 Fuse terminal 15 R or terminal 15
- 2 Pushbutton switch
- 3 Heating pad, seat
- 4 Heating pad, backrest


a = Connection terminal 15 R or terminal 15

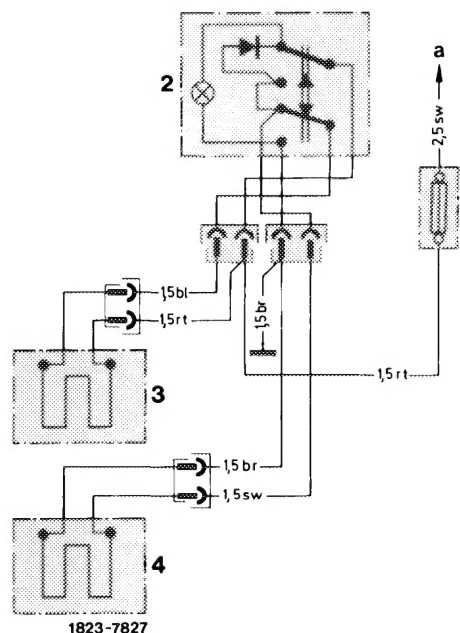

1823-7827

Wiring diagram 2nd version

- 1 Switch driver's seat/front passenger's seat
- 2 Heating pad in seat
- 3 Heating pad in backrest
- a On cable connector terminal 58d
- b On fuse capsule terminal 15 output

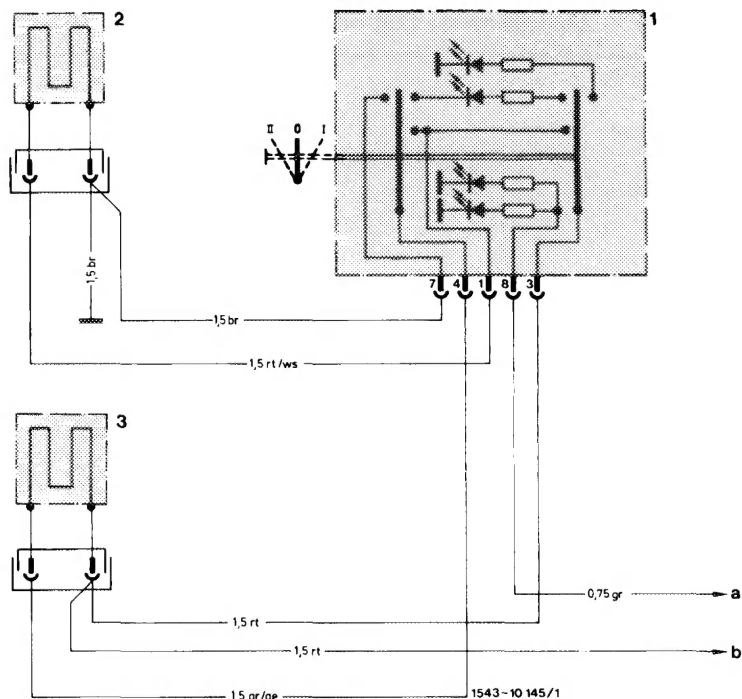

In pushbutton position ●● the two heating pads in seat are connected in parallel. The power input amounts to approx. 5 A at 12 V battery voltage; the electric output amounts to approx. 60 W.

